

HI THERE! I'M YOUR NEW FAVORITE TRAVEL BUD!

The MiniMeis Backpack
pairs perfectly
with the MiniMeis Carrier






HOW TO GEAR UP



1.

The two hooks attach to the front of the MiniMeis. First attach the hook on one side and swing around and attach the hook on the other side.

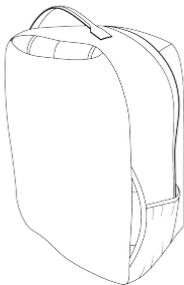

2.

Avoid loose straps by storing the shoulder-straps in the pocket when connected to the MiniMeis.




3.

The backpack hangs safely underneath the seat of the MiniMeis. For more information and tutorials see minimeis.com

IMPORTANT! THIS BAG IS NOT A TOY! IT IS NOT INTENDED FOR PLAY BY CHILDREN.




HOW TO CHILL

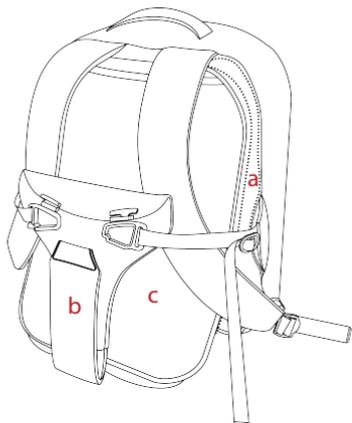

1.

The backpack easily doubles as a child seat while on the go. Fully open the side zipper *a Flip out the tri-point seat pad *b which is hidden inside.

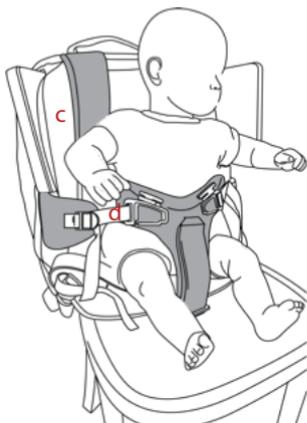

2.

Slide the backpack over the back of any chair/bench or similar. Back padding *c must be on the seated side. Attach the side straps *d to the front of the seat pad.

IMPORTANT!
NOTE CAREFULLY THE WARNING TAG ON THE SEAT

WARNING

FALL and STRANGULATION HAZARD

To prevent **SERIOUS INJURY** from falling or sliding out.

- **NEVER** leave a child unattended
- Not for use separately.
- Properly attach to chair or bench
- The seat may not fit all chairs or benches
- **NEVER** use the seat with a child less than 6 months old or with a child that cannot sit upright unassisted
- No applicable safety standard for this type of product
- Use at own risk
- Remove content from backpack if necessary:



• Some chairs may not be stable enough to seat a baby

• Be **EXTRA** aware of weight/balance and chair tipping point